



Madden

Madden 2000/2250/2400 assembly instruction

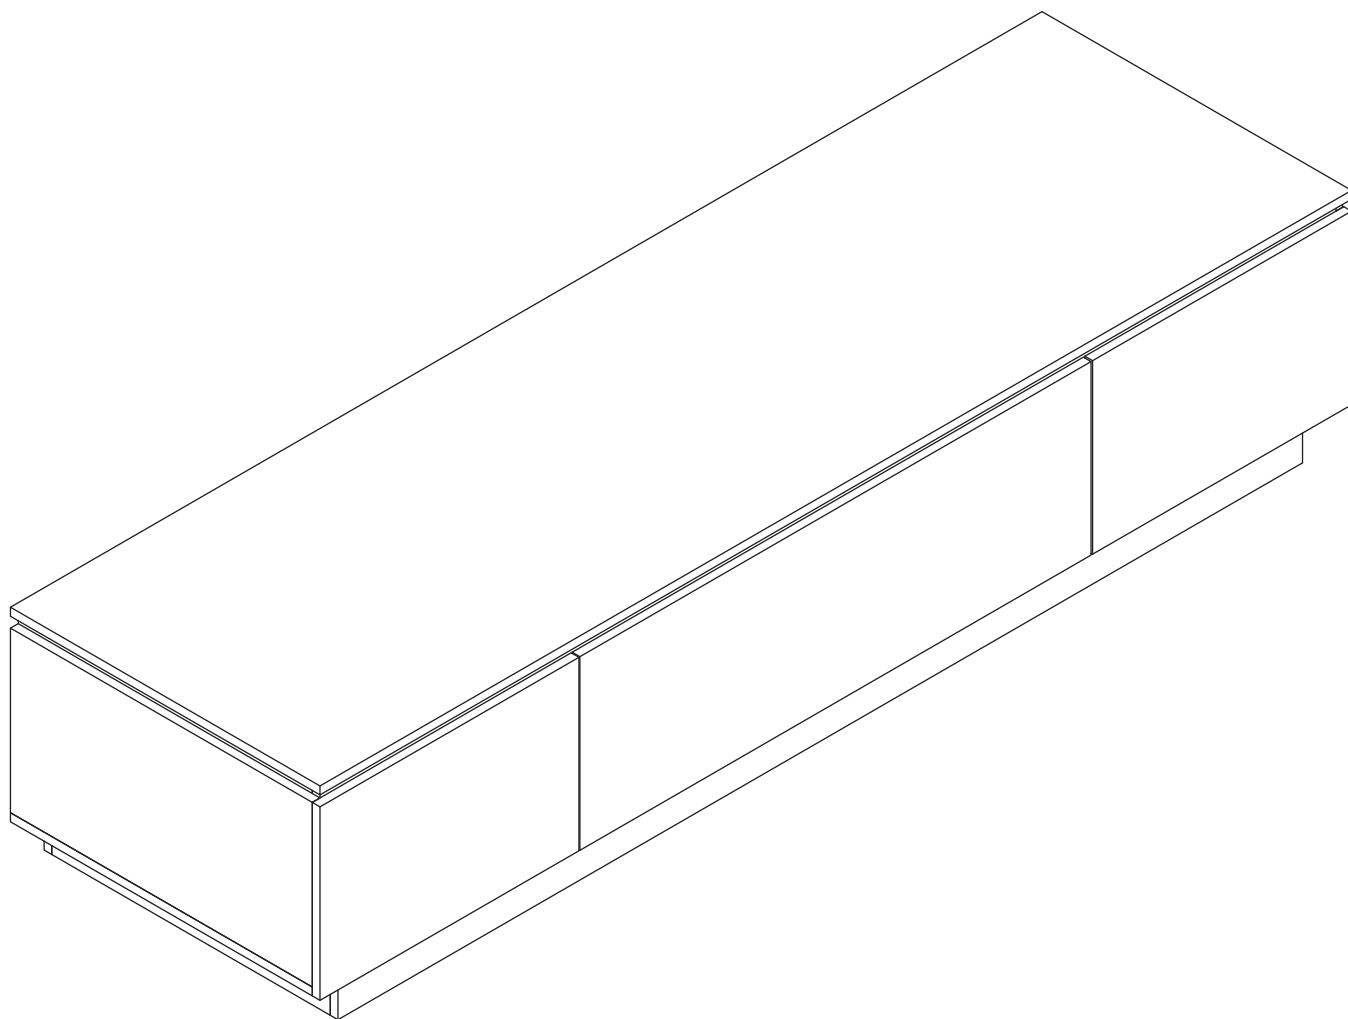

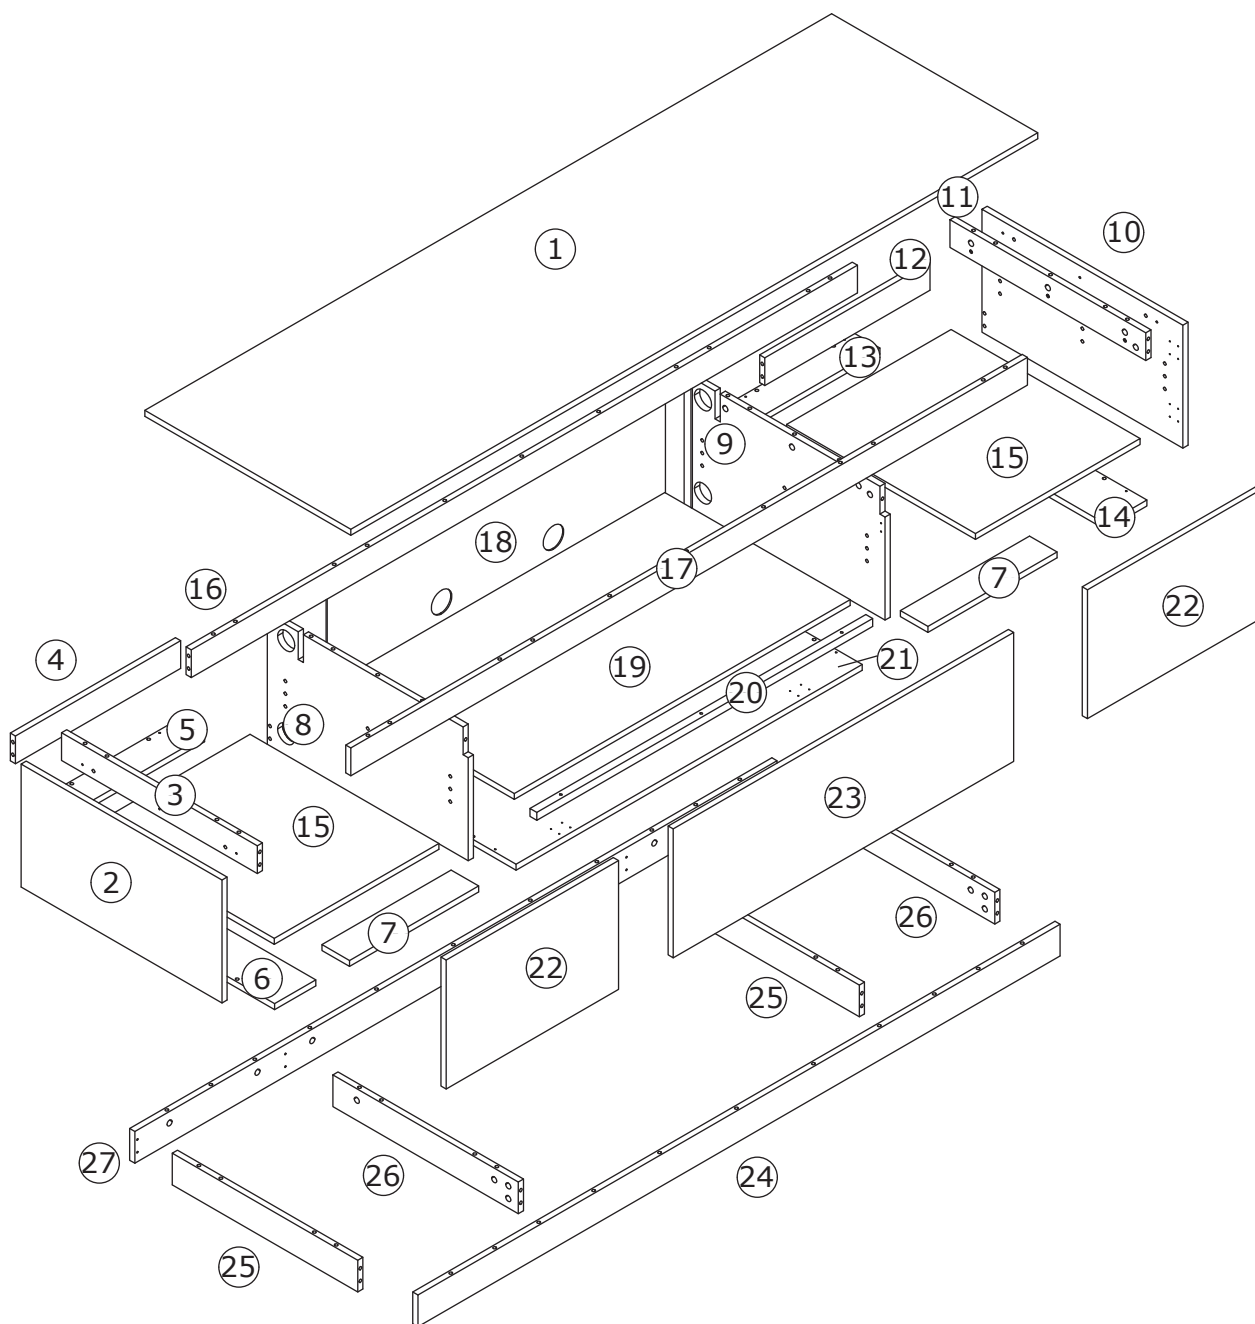





A x 48+2 Ø 6 x 35 mm	B x 48+2 Ø 15 x 10mm	C x 56+2 Ø 6 x 30 mm	D x 4 Ø 6 x 20 mm	E x 26+1 Ø 5 x 40 mm	F x 6 M6 x 20 mm
G x 18+1	H x 42+2 Ø 3 x 12 mm	I x 7	J x 4 M6 x 30 mm	K x 10 Ø 3 x 16 mm	L x 10
M x 1	N x 1	O x 1	P x 2	Q x 4 Ø 3 x 16 mm	

1

B x 32



Ø6x35 mm

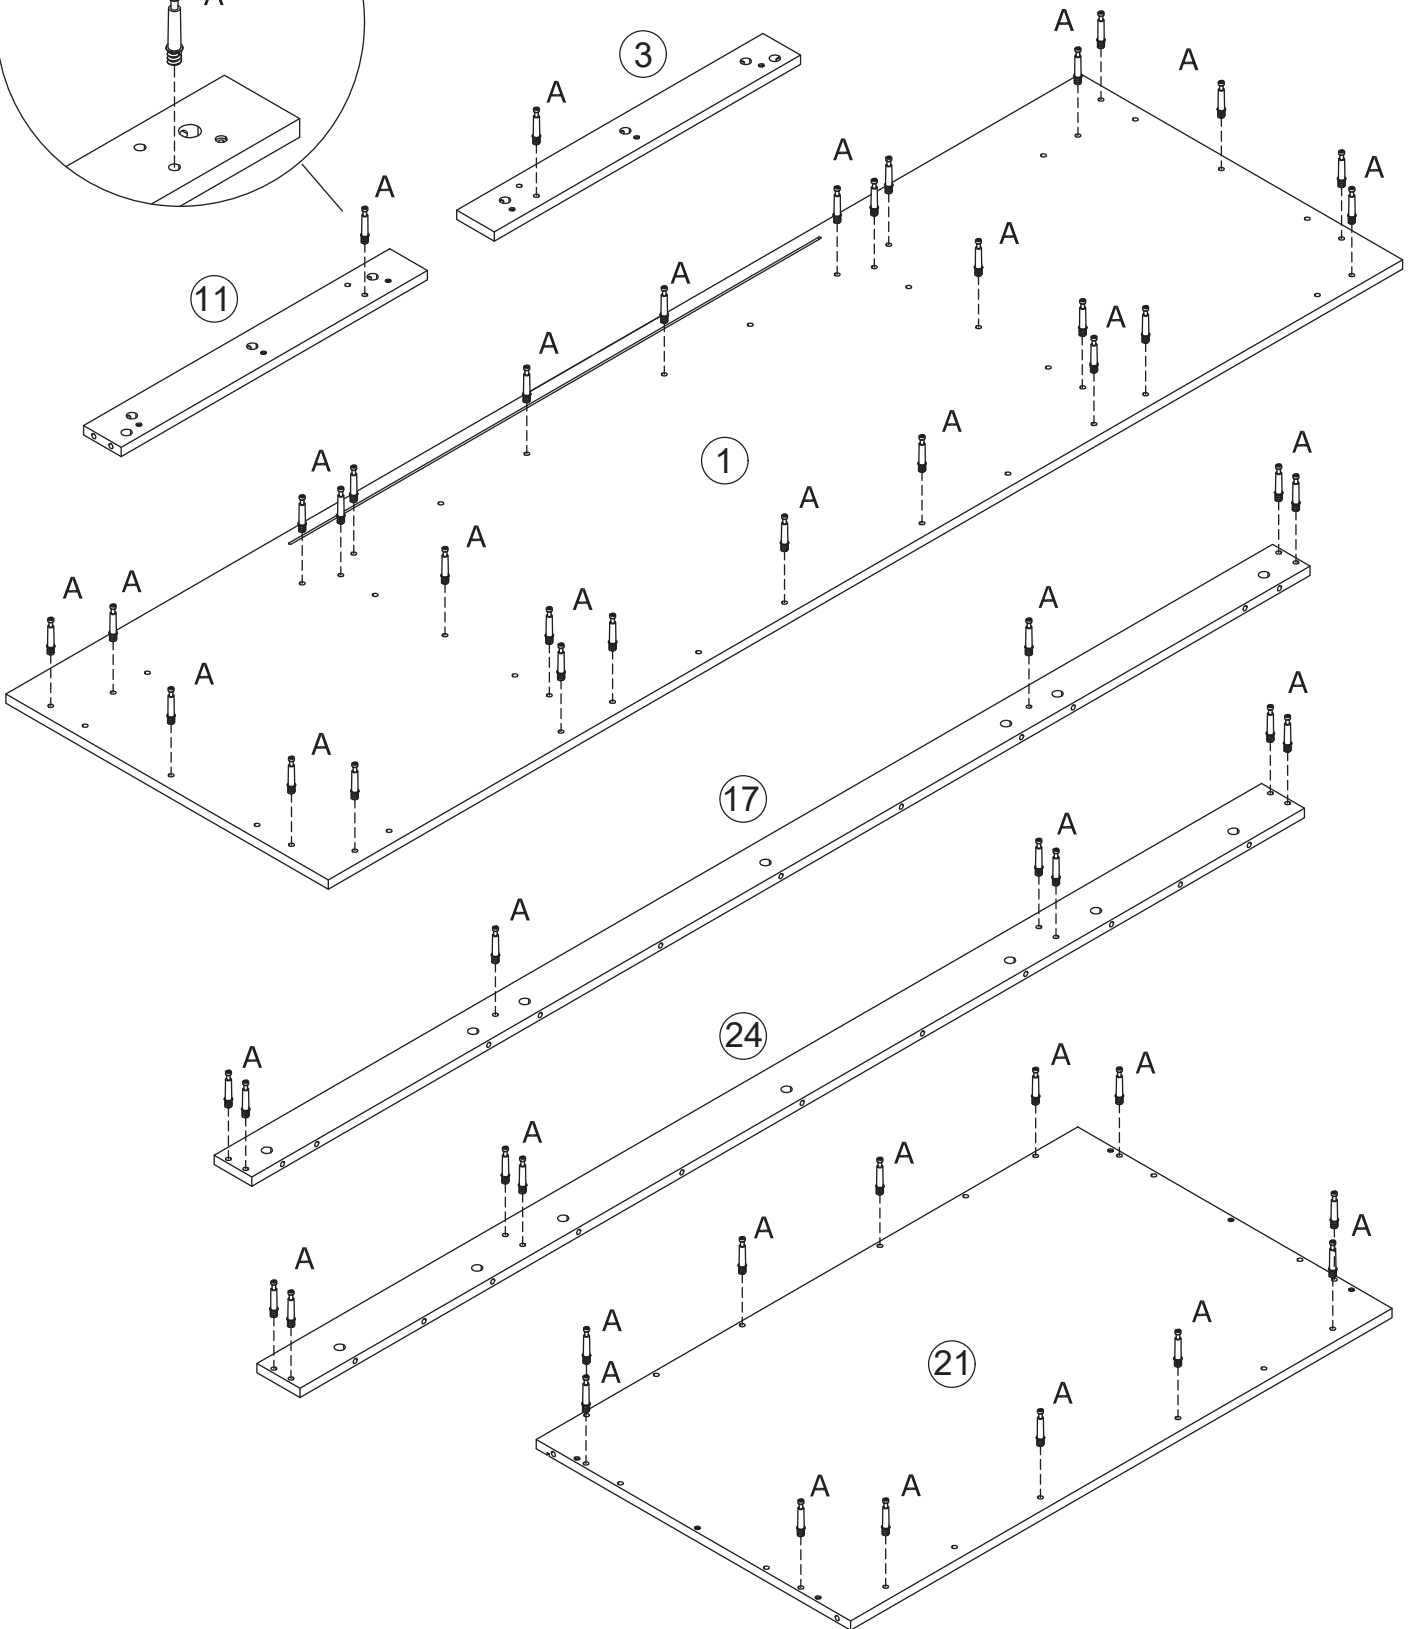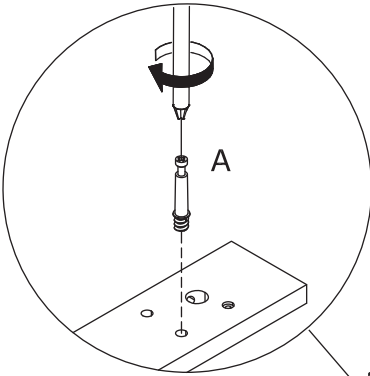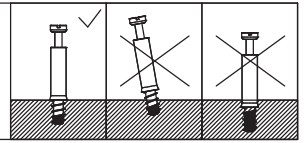

2

B x 16





Ø6x35 mm



J x 4







M6x30 mm

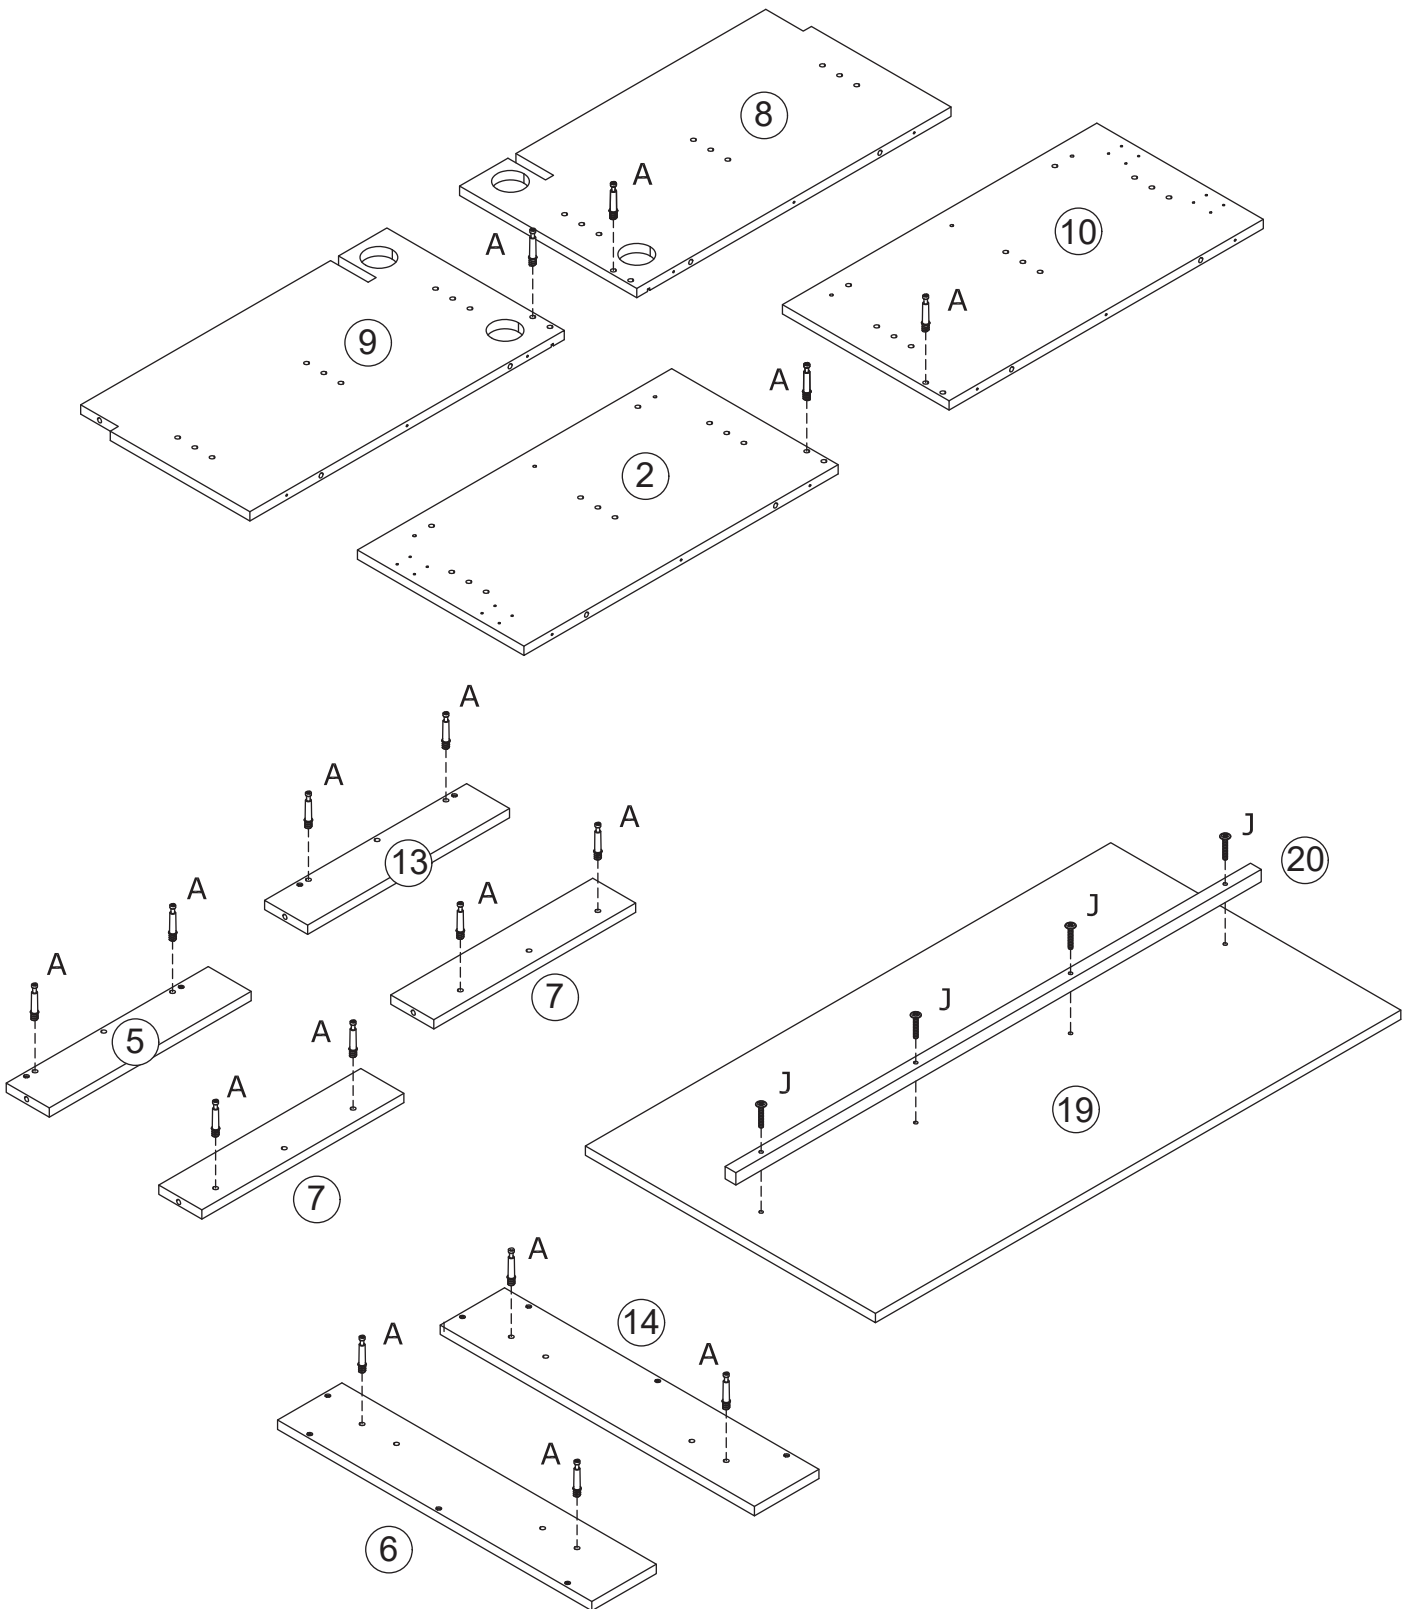




3

D x 4  Ø6 x 20 mm	F x 6  M6 x 20 mm	H x 14  Ø3 x 12 mm	I x 7 	
--	--	---	---	---

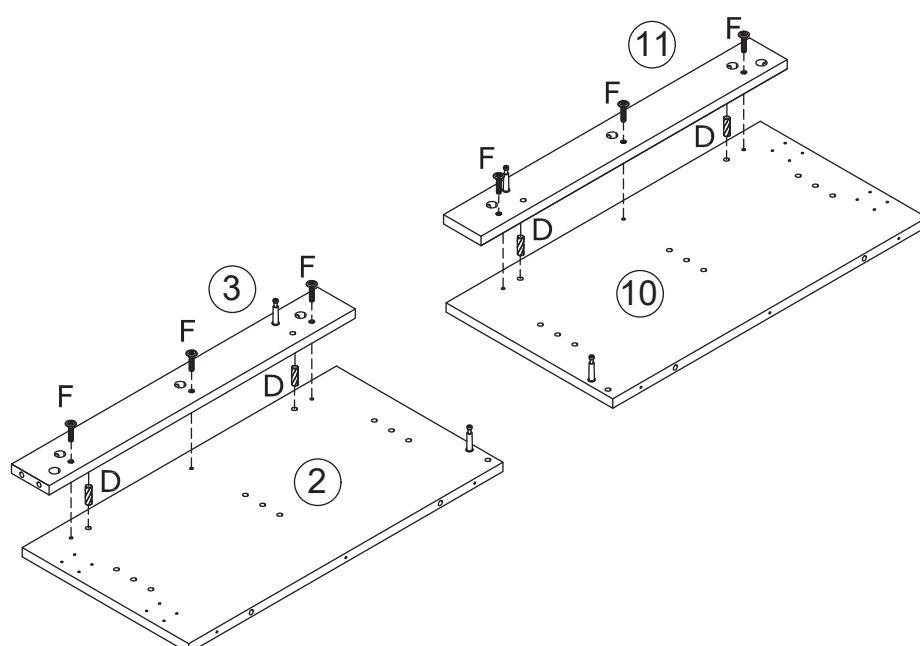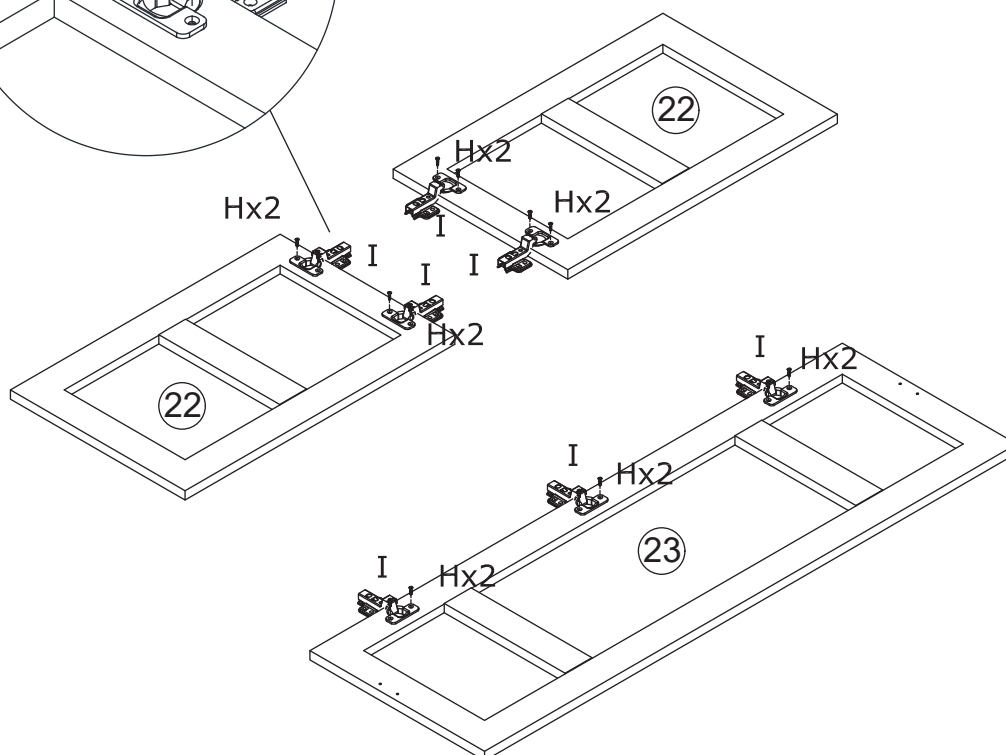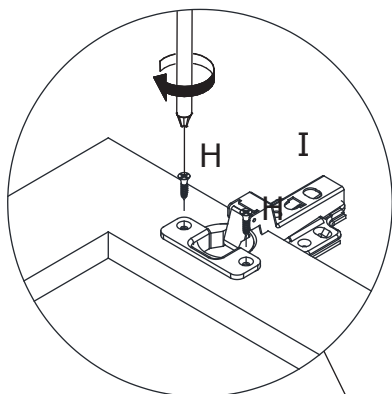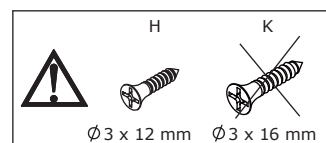





4

B x 2  Ø15 x 10 mm	C x 2  Ø6 x 30 mm	
---	--	---

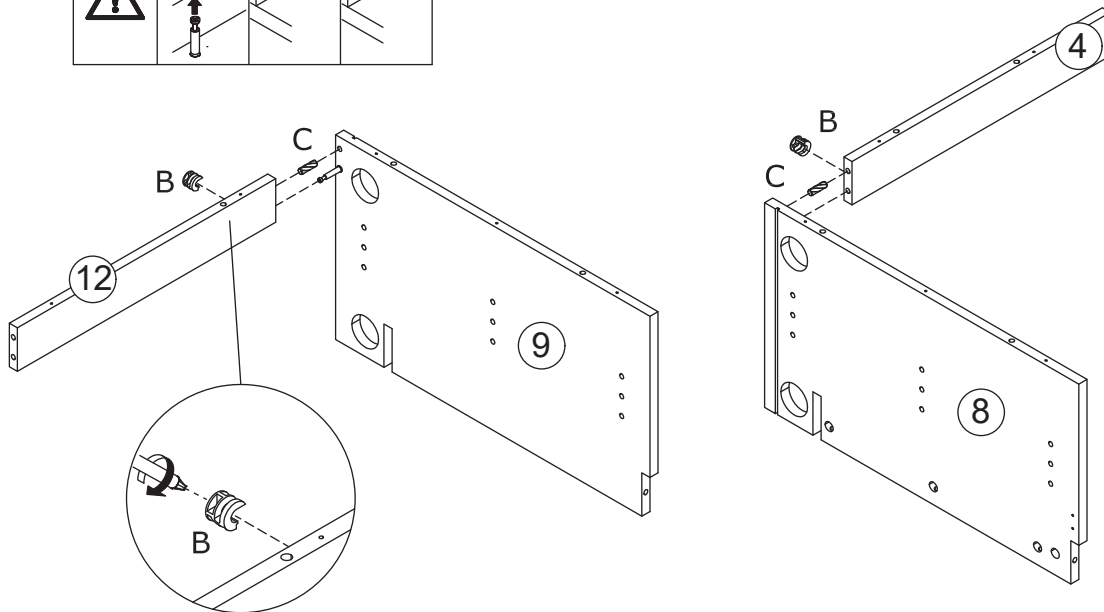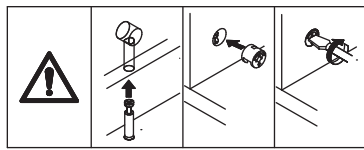

5

B x 4  Ø15 x 10 mm	C x 4  Ø6 x 30 mm	
---	--	---

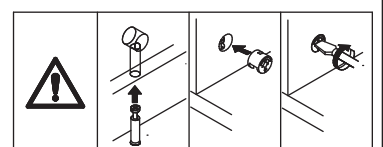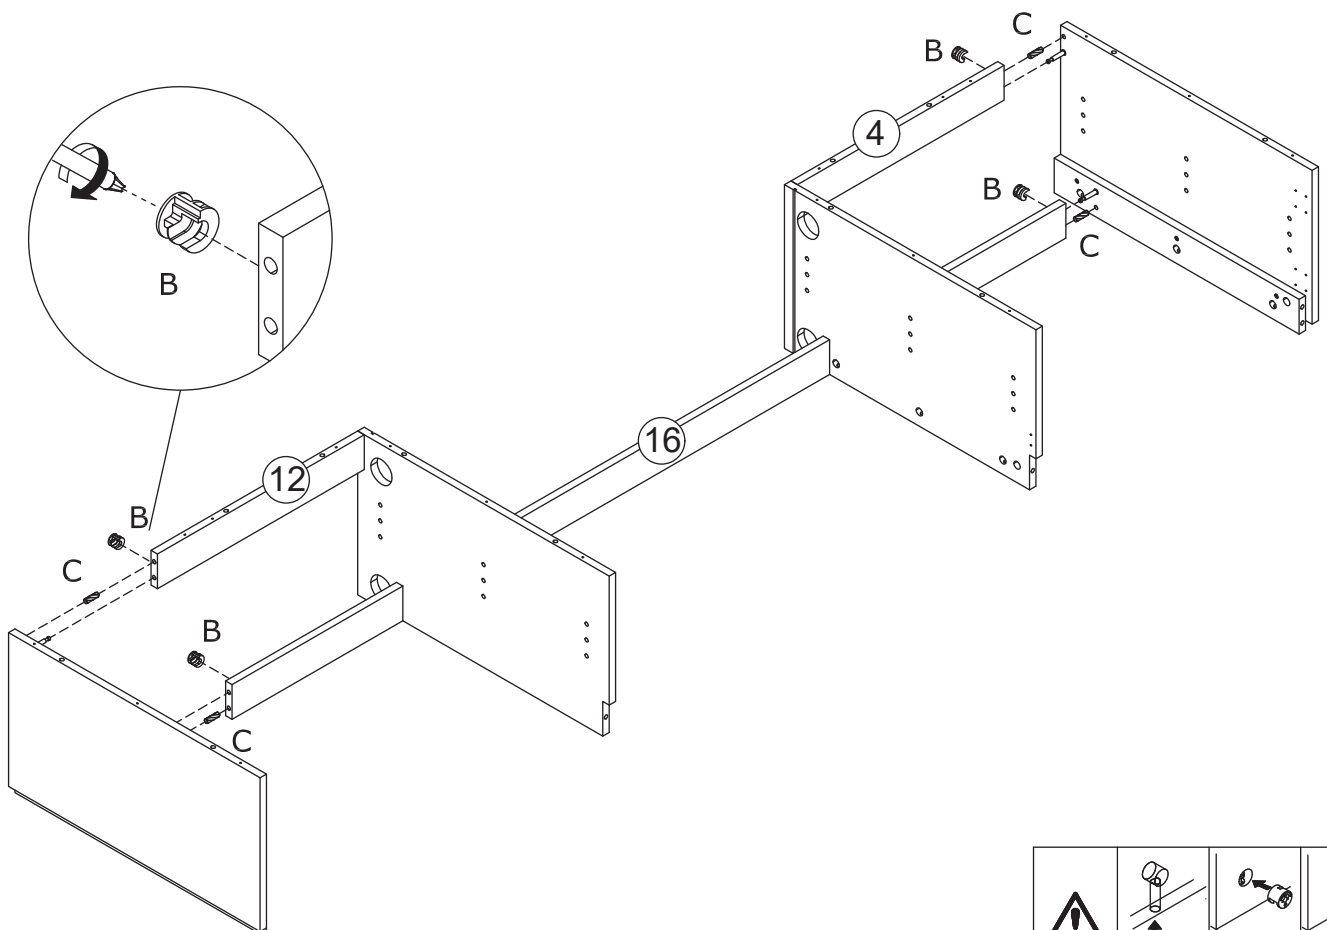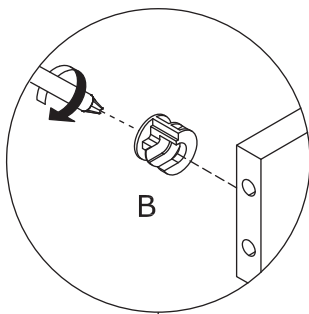

6

B x 4






Ø15 x 10 mm


C x 2






Ø6 x 30 mm

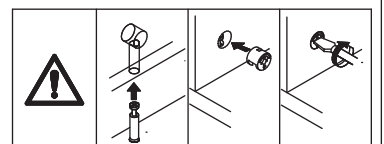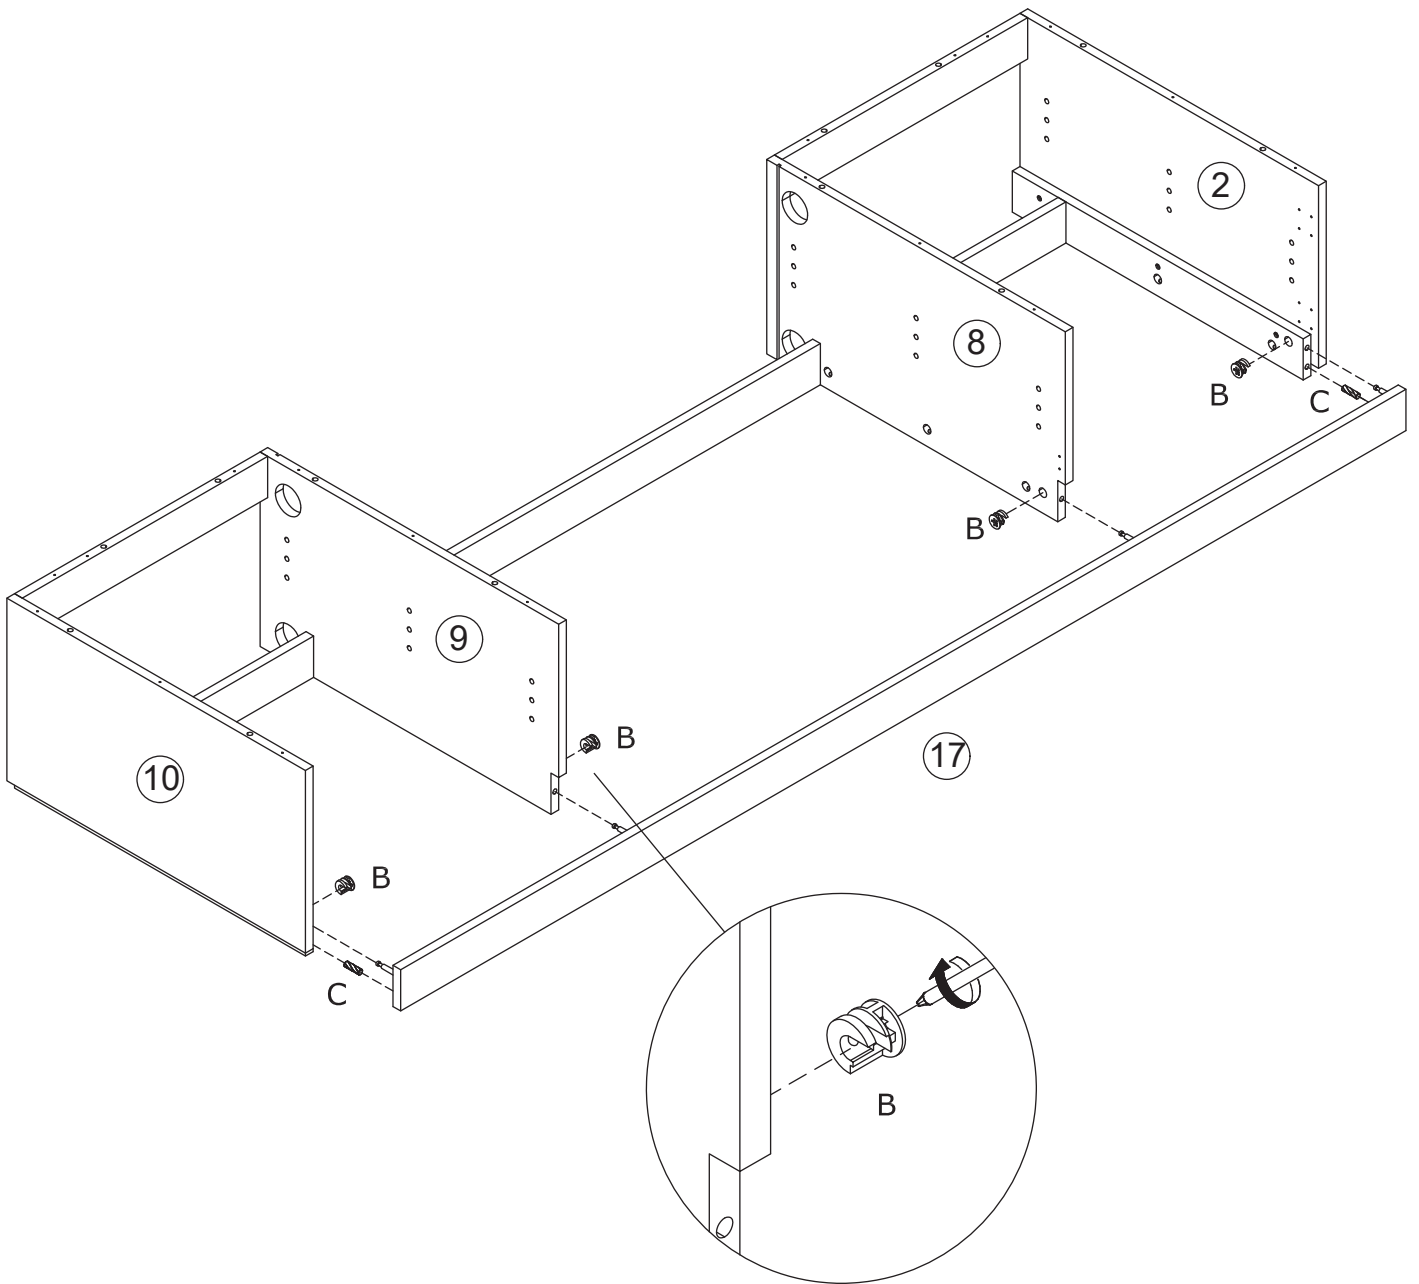

7

B x 28  Ø15 x 10 mm	C x 16  Ø6 x 30 mm	
--	---	---

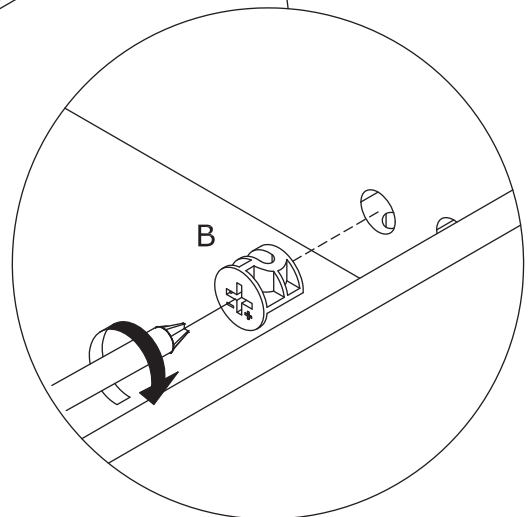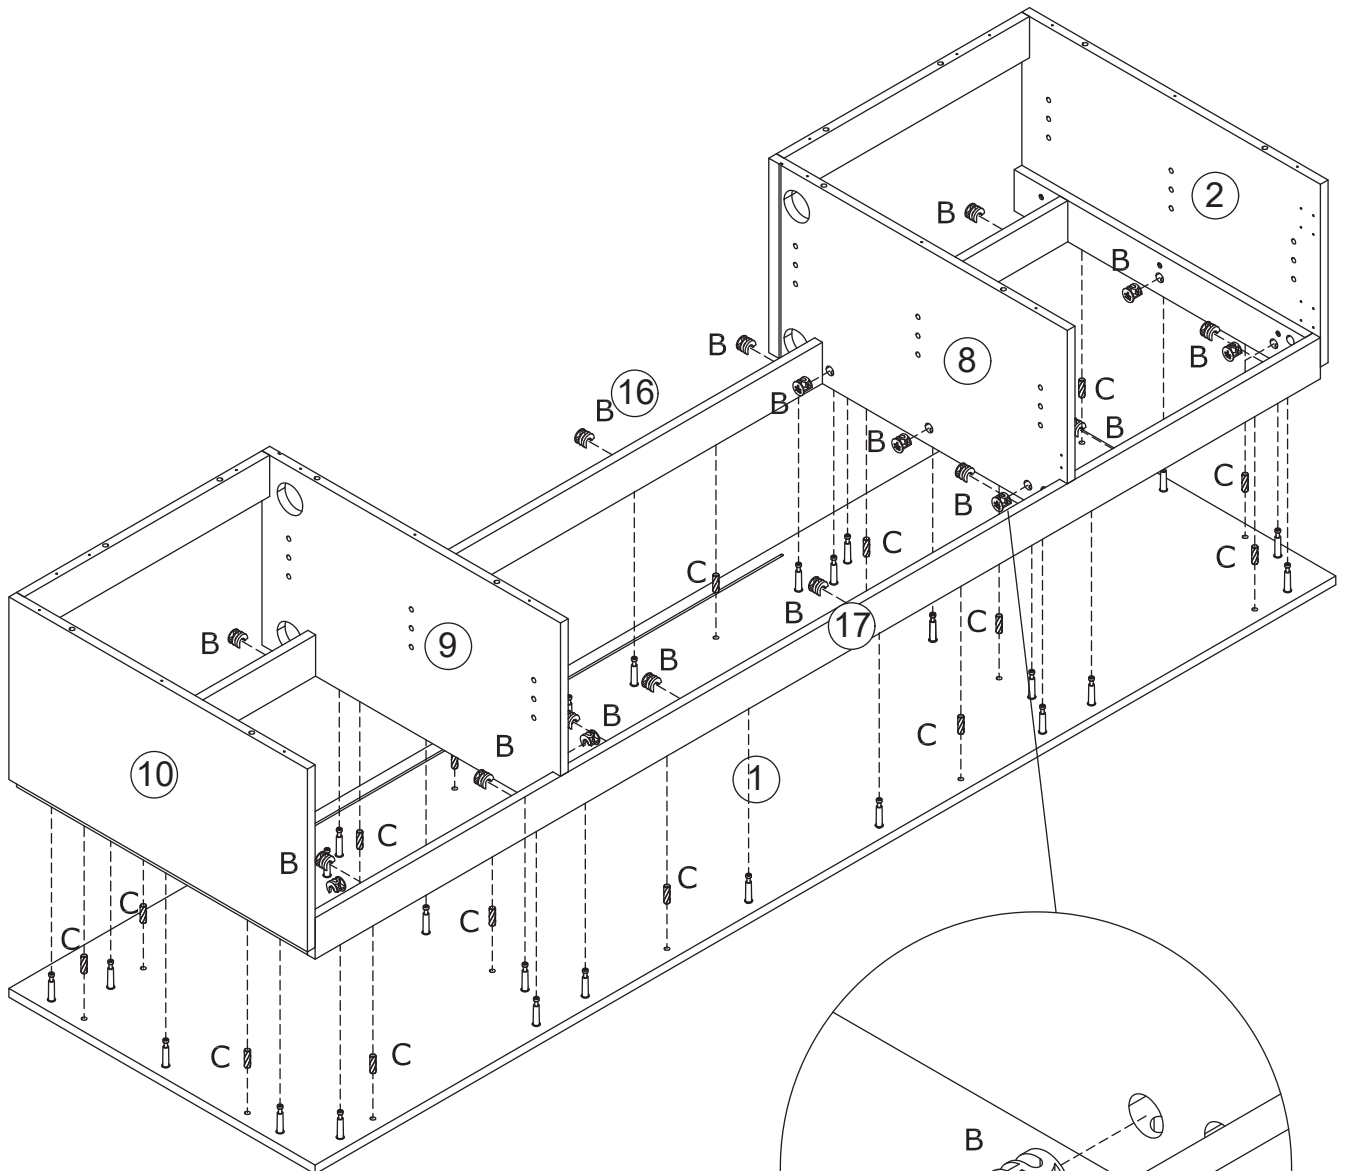
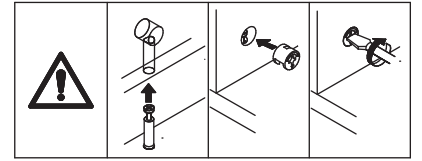


8

C x 4




Ø6x30 mm

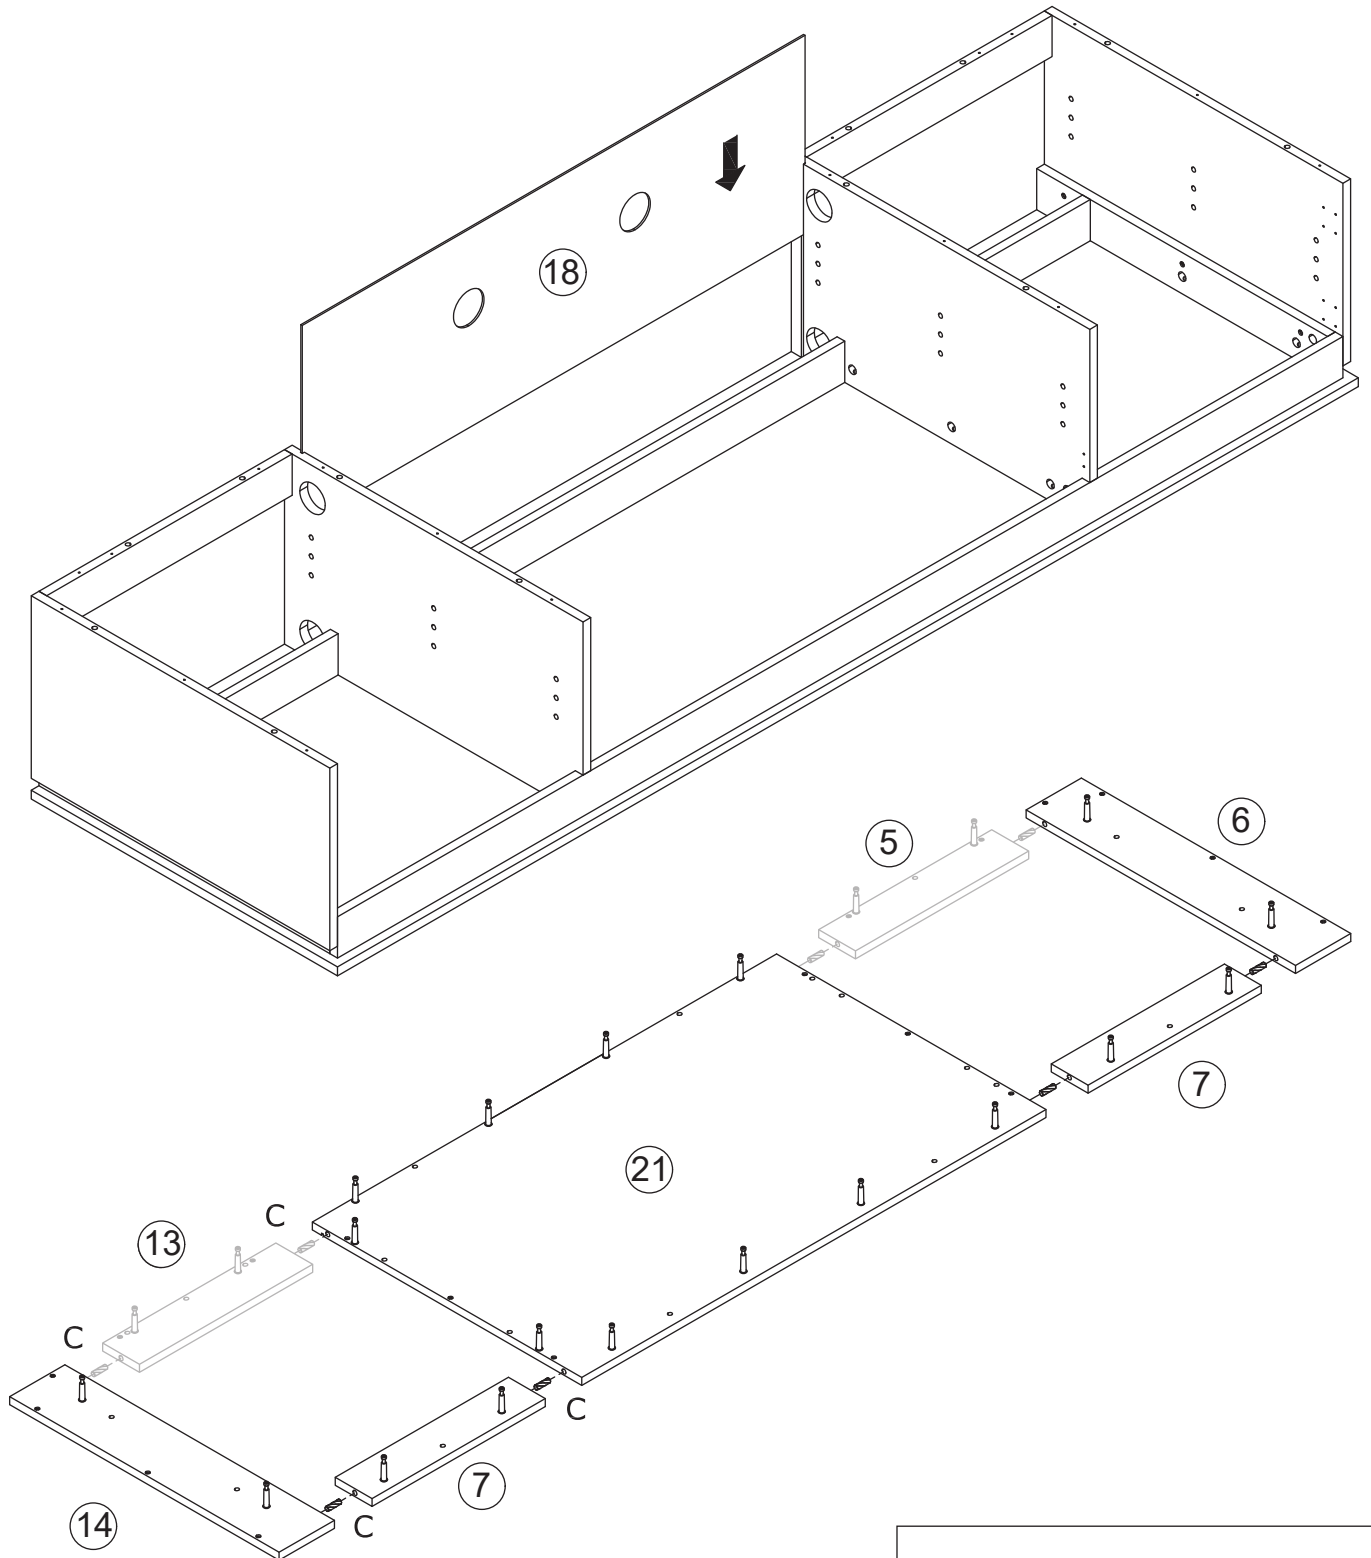





Note: For larger subwoofers, do not assemble items 5 and 13.

9




C x 12  Ø6x30 mm	E x 18  Ø5x40 mm	M x 1 	
---	---	--	--

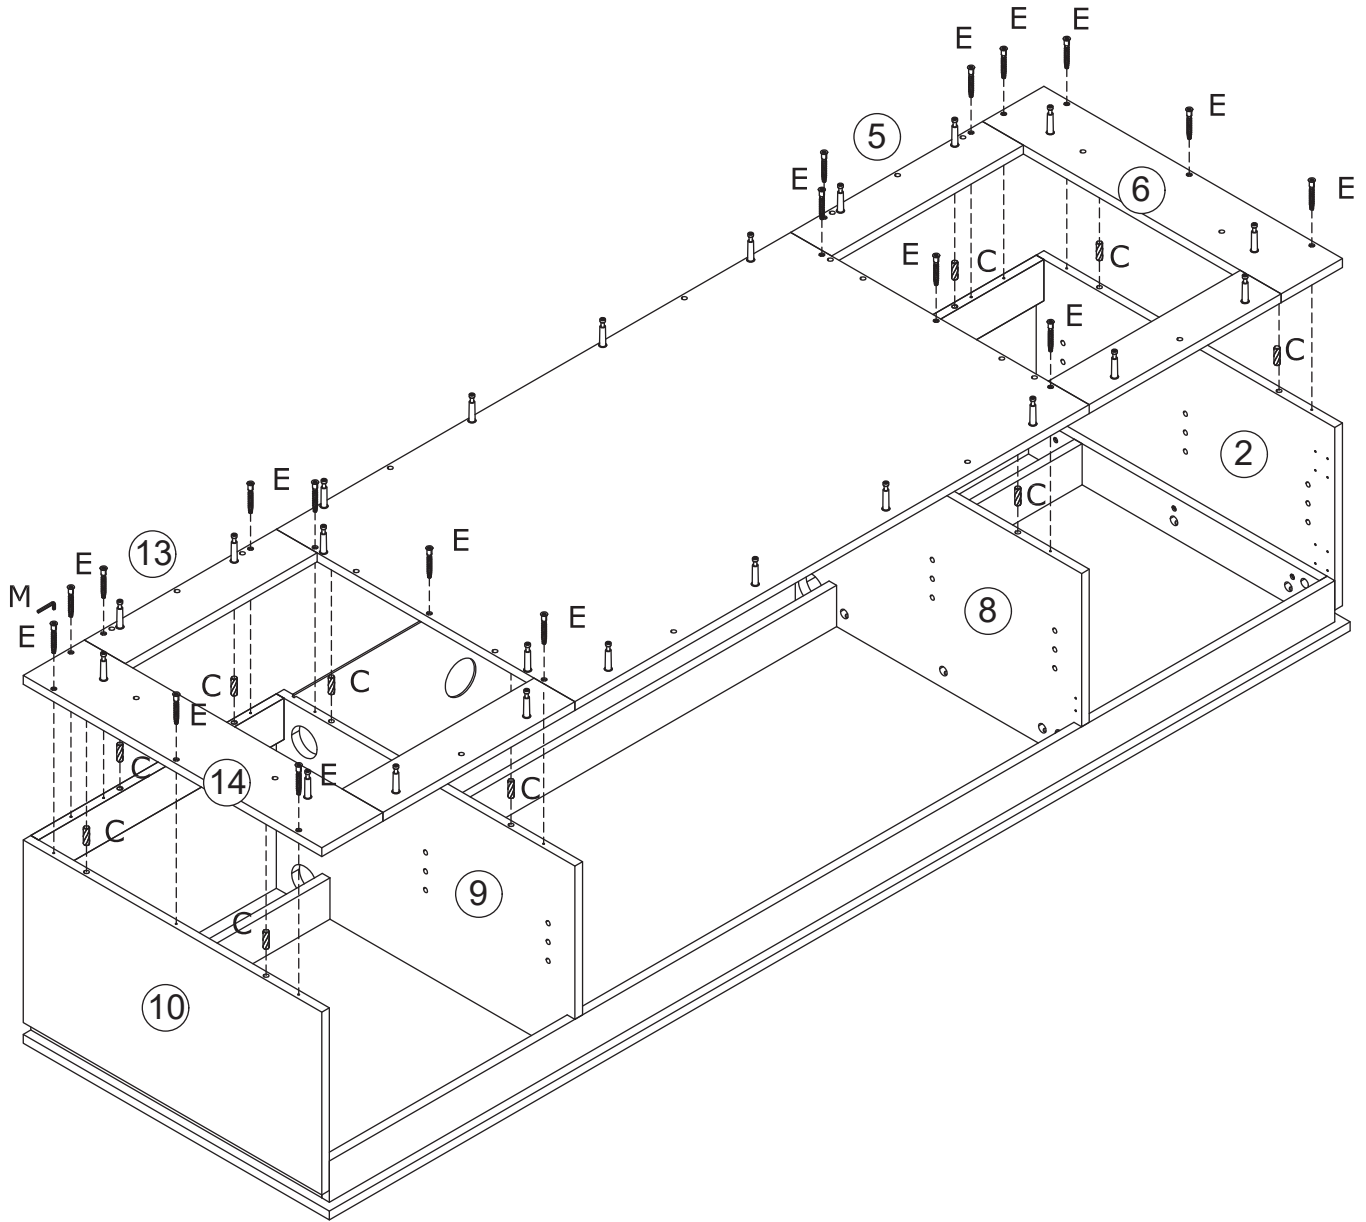

10

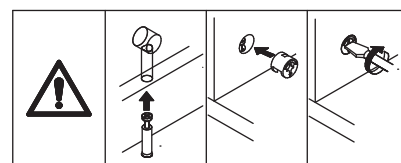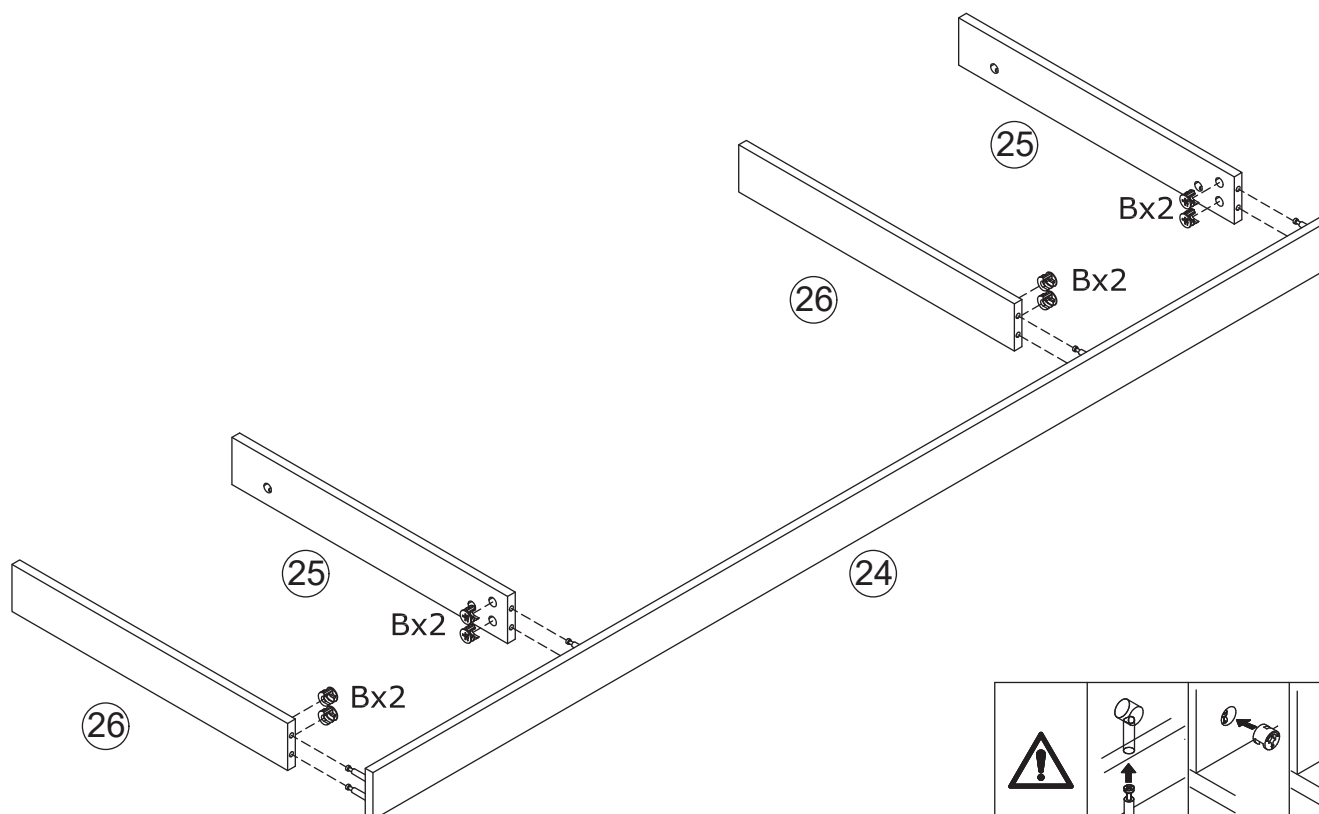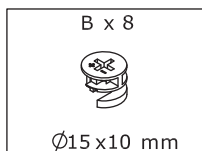

11

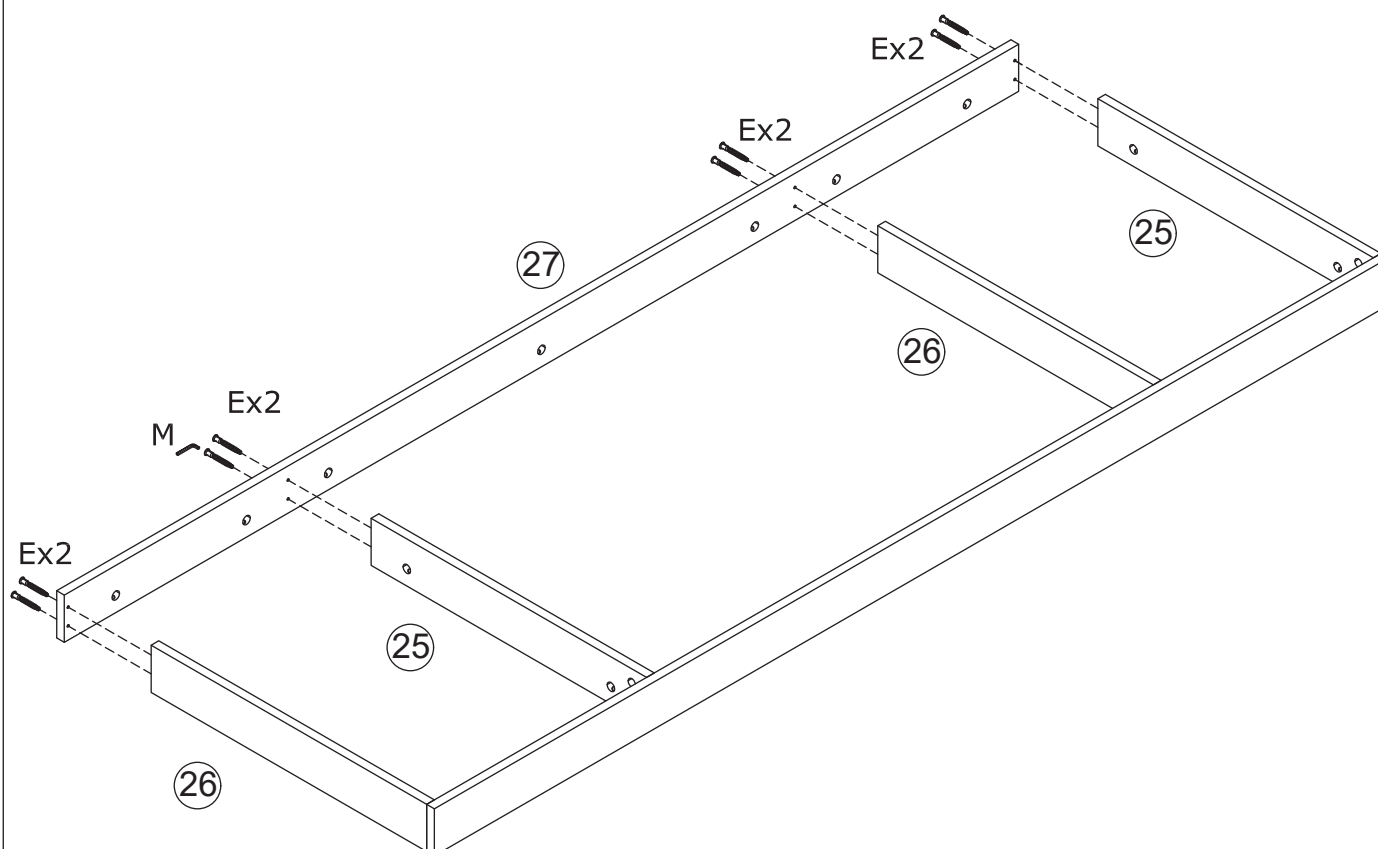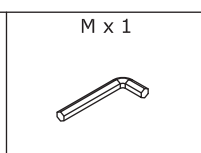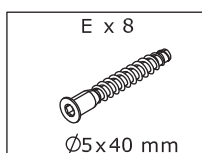

12

B x 24






Ø15 x 10 mm



C x 16




Ø6 x 30 mm

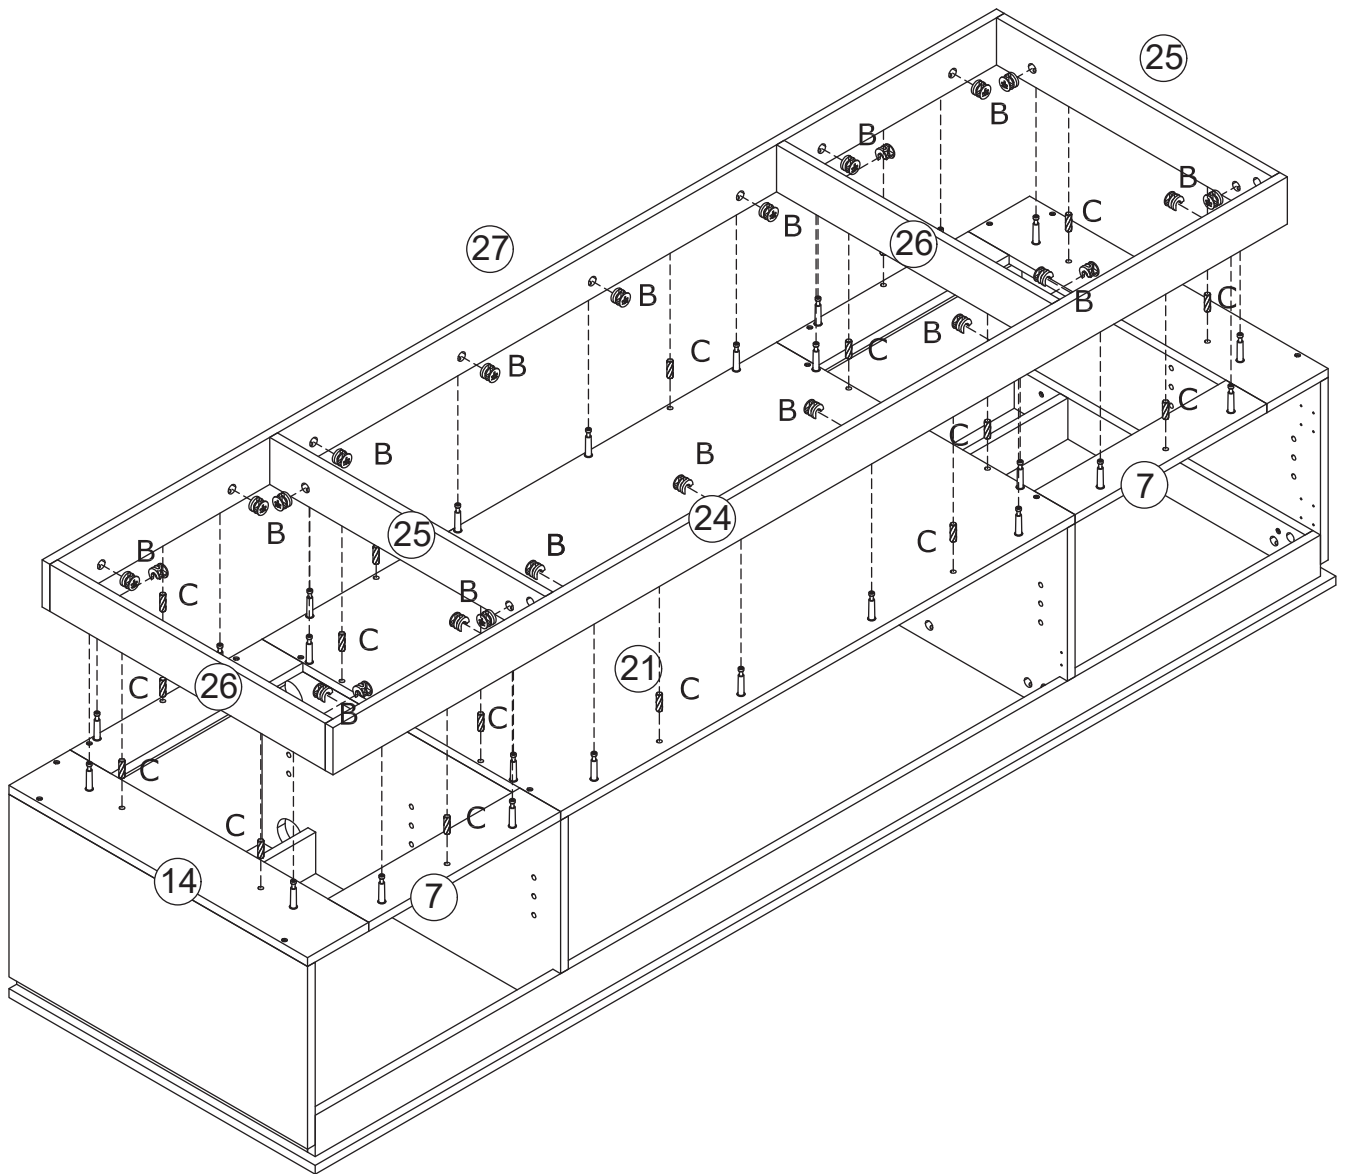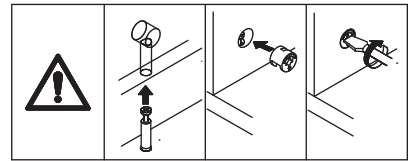

13

G x 18 	P x 2 	Q x 4  Ø3x16 mm	
---	--	--	---

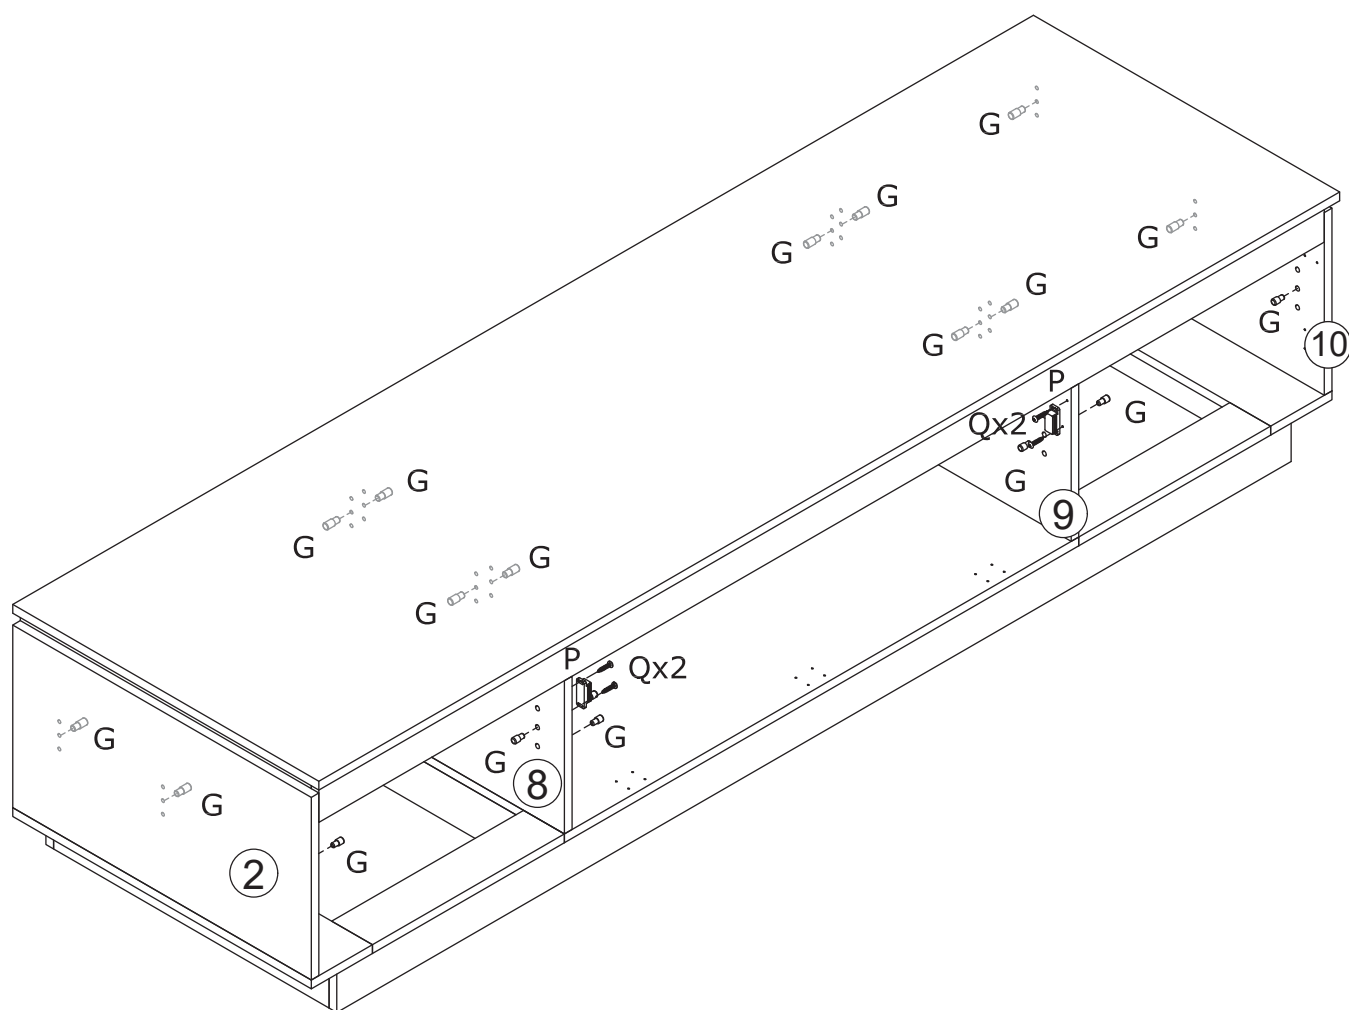

14

H x 38




 Ø3x12 mm

N x 1


O x 1




ADJUSTING DOORS / AJUSTEMENT DES PORTES

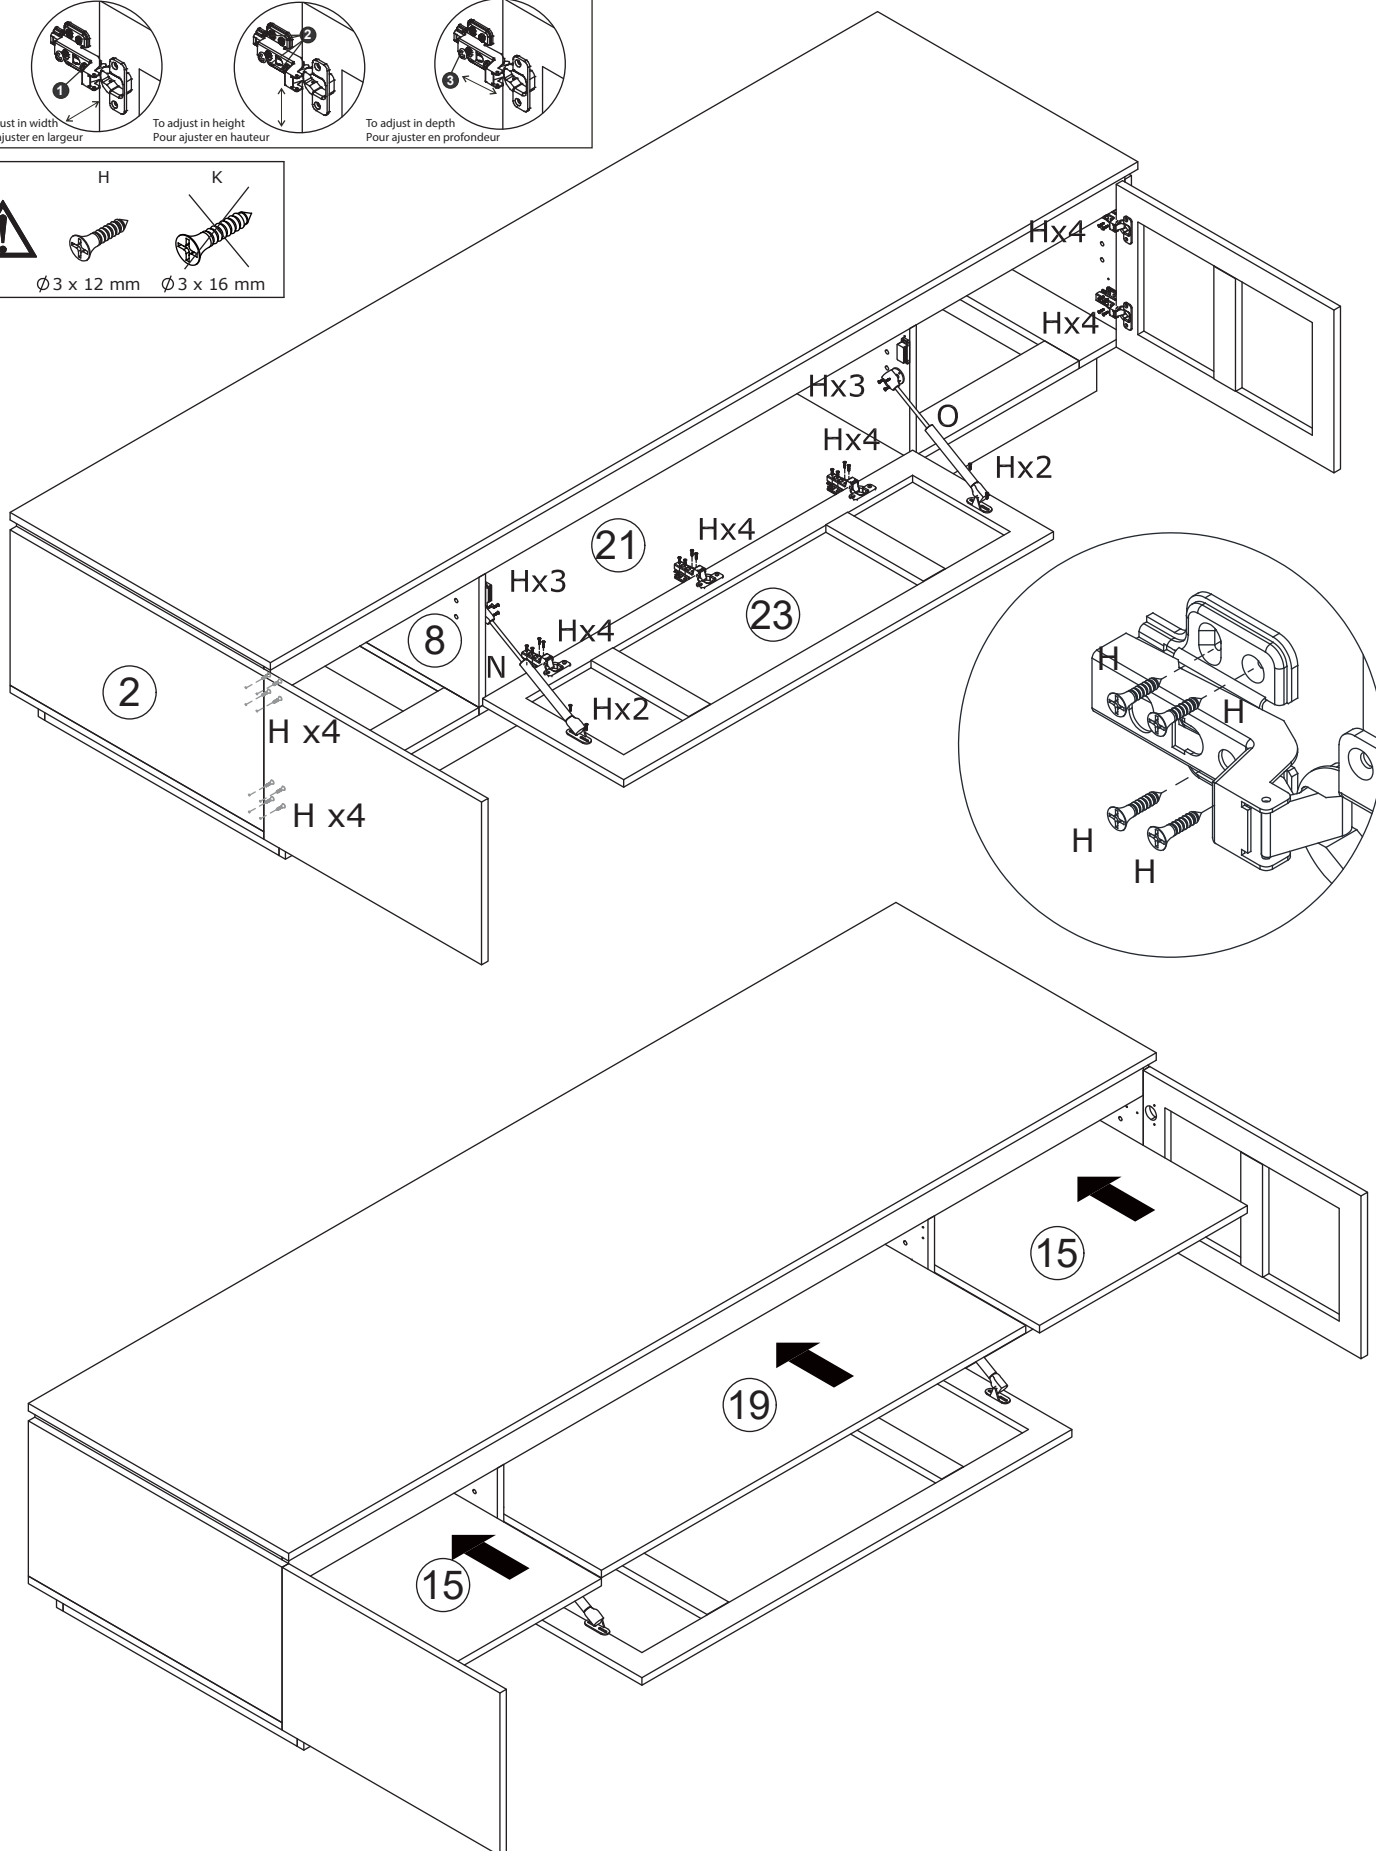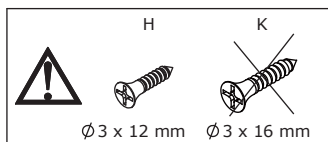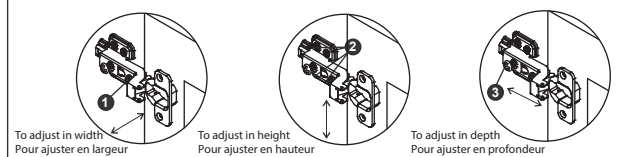

15

K x 10



Ø3x16 mm

L x 10

